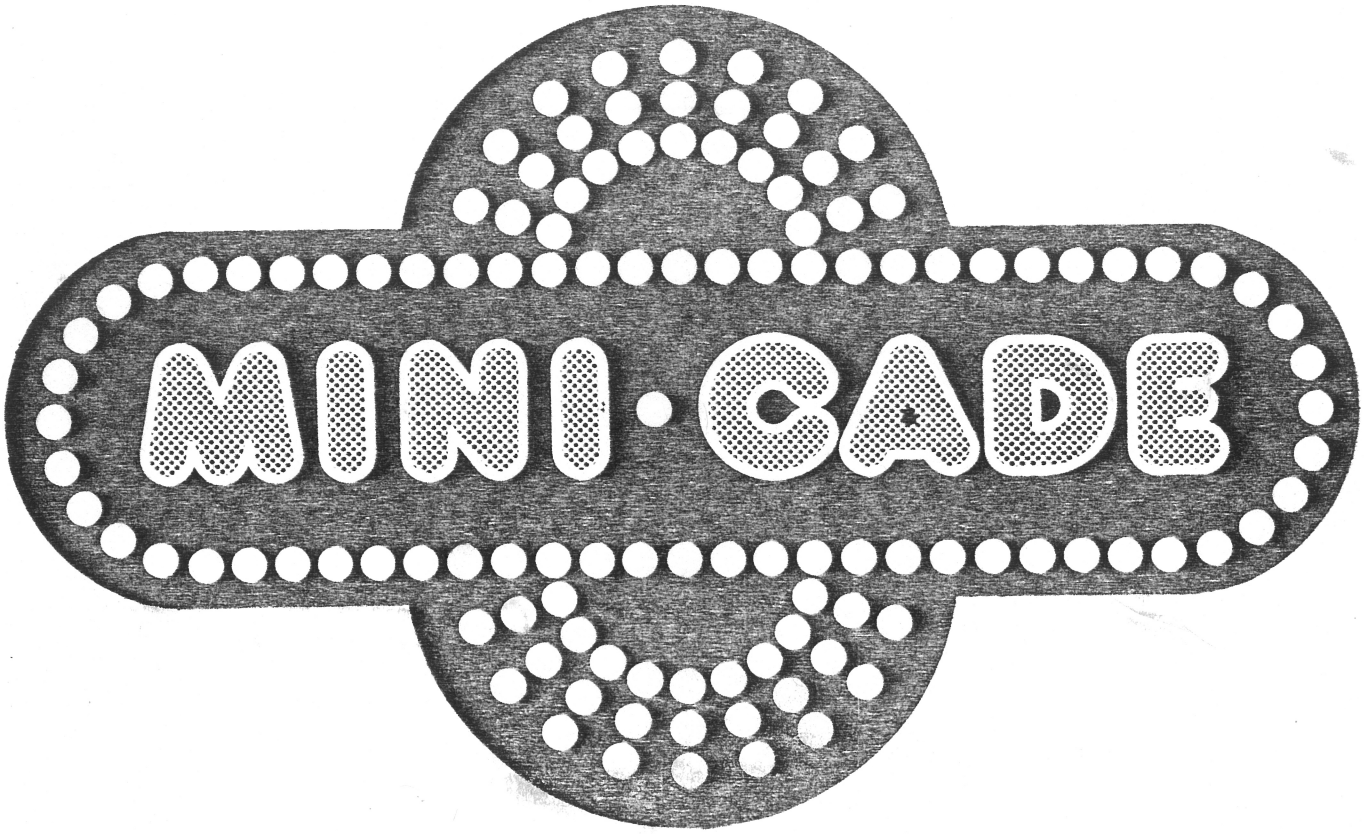

OWNER'S MANUAL

TO CHANGE GAME CARTRIDGES: Unlock the back door of the cabinet, you will be facing the back of the Vectrex unit. The present cartridge will be on the bottom left-hand side of the game, remove the old cartridge and insert the new cartridge making sure not to put the new cartridge in up-side-down.

NOTE: The game MINESTORM is built-in to each game and does not have a game cartridge. When no game cartridges are inserted, MINESTORM will automatically be the game displayed on the video screen.

NOTE: Every time a game cartridge is changed, the color overlay and instruction card should be changed as well.

TO CHANGE FRONT SCREEN OVERLAY: Unlock and open the back door of the cabinet. Gently lift the Vectrex unit UP and OUT far enough to access the front of the game. Remove the present color overlay by the die cut on the top of the plastic, and insert the new overlay making sure it is secure behind the tabs at the top and bottom of the display screen.

TO CHANGE THE INSTRUCTIONS: Each time a game cartridge is changed, the instruction card should also be changed. While changing the color overlay, you should be able to reach the front instruction card without much difficulty. To remove the instruction card, simply pull out the old one from the bottom, and insert the new one the same way, it's that easy. The two pieces of plexiglass will hold the new instruction card firmly in place.

NOTE: Be sure to save the instruction card you just removed in case you wish to change the game back to the game you just removed.

78 8 off

MINI-CADE

Dip Switch Selection

	1	2	3	4	5	6
26 seconds	ON	OFF	OFF	OFF	OFF	ON
41 seconds	OFF	ON	OFF	OFF	OFF	ON
1 minute 10 seconds	OFF	OFF	ON	OFF	OFF	ON
2 minutes 6 seconds	OFF	OFF	OFF	ON	OFF	ON
4 minutes 1 second	OFF	OFF	OFF	OFF	ON	ON
Constant Play	X	X	X	X	X	OFF

NOTE: In Constant Play, the X means it doesn't matter if the switches are set to ON or OFF.

The combination of any of the above gives you the equivalent of the combined times:

EXAMPLE: To add 2 minutes 6 seconds plus 1 minute 10 seconds, the Dip Switch setting should look like this:

1	2	3	4	5	6
OFF	OFF	ON	ON	OFF	ON

The time allowed would equal:
3 minutes 16 seconds.

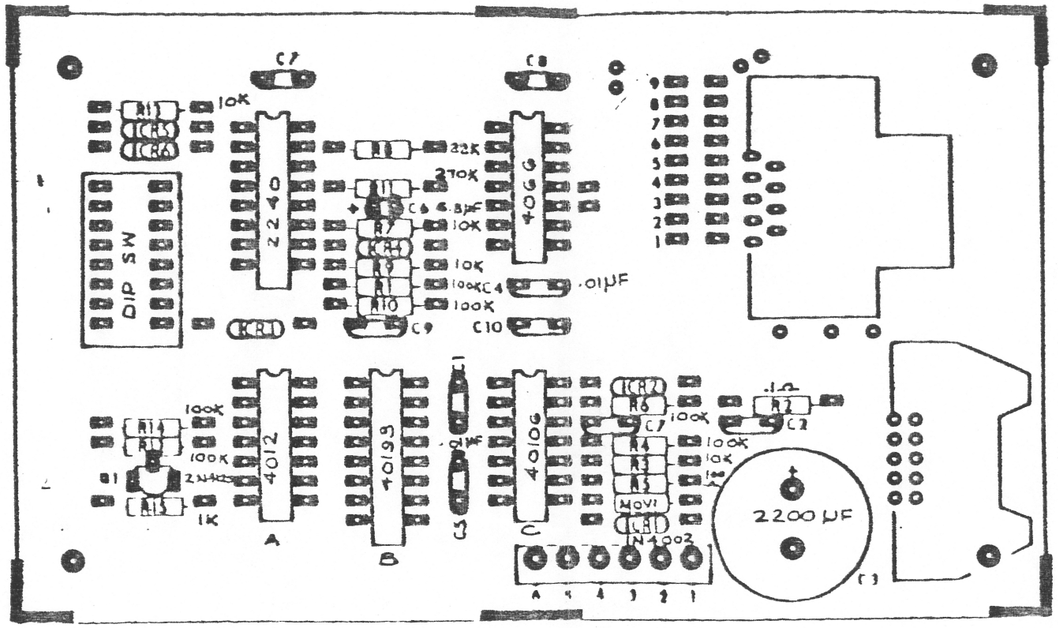

Silkscreen

Padmaster

2. ALL DIODES 914 UNLESS NOTED.
1. CAPS .1 UNLESS NOTED.
NOTES:

P.C. BOARD ASSY. TIMER BOARD
92-2065

P.C. board assy
Timer board

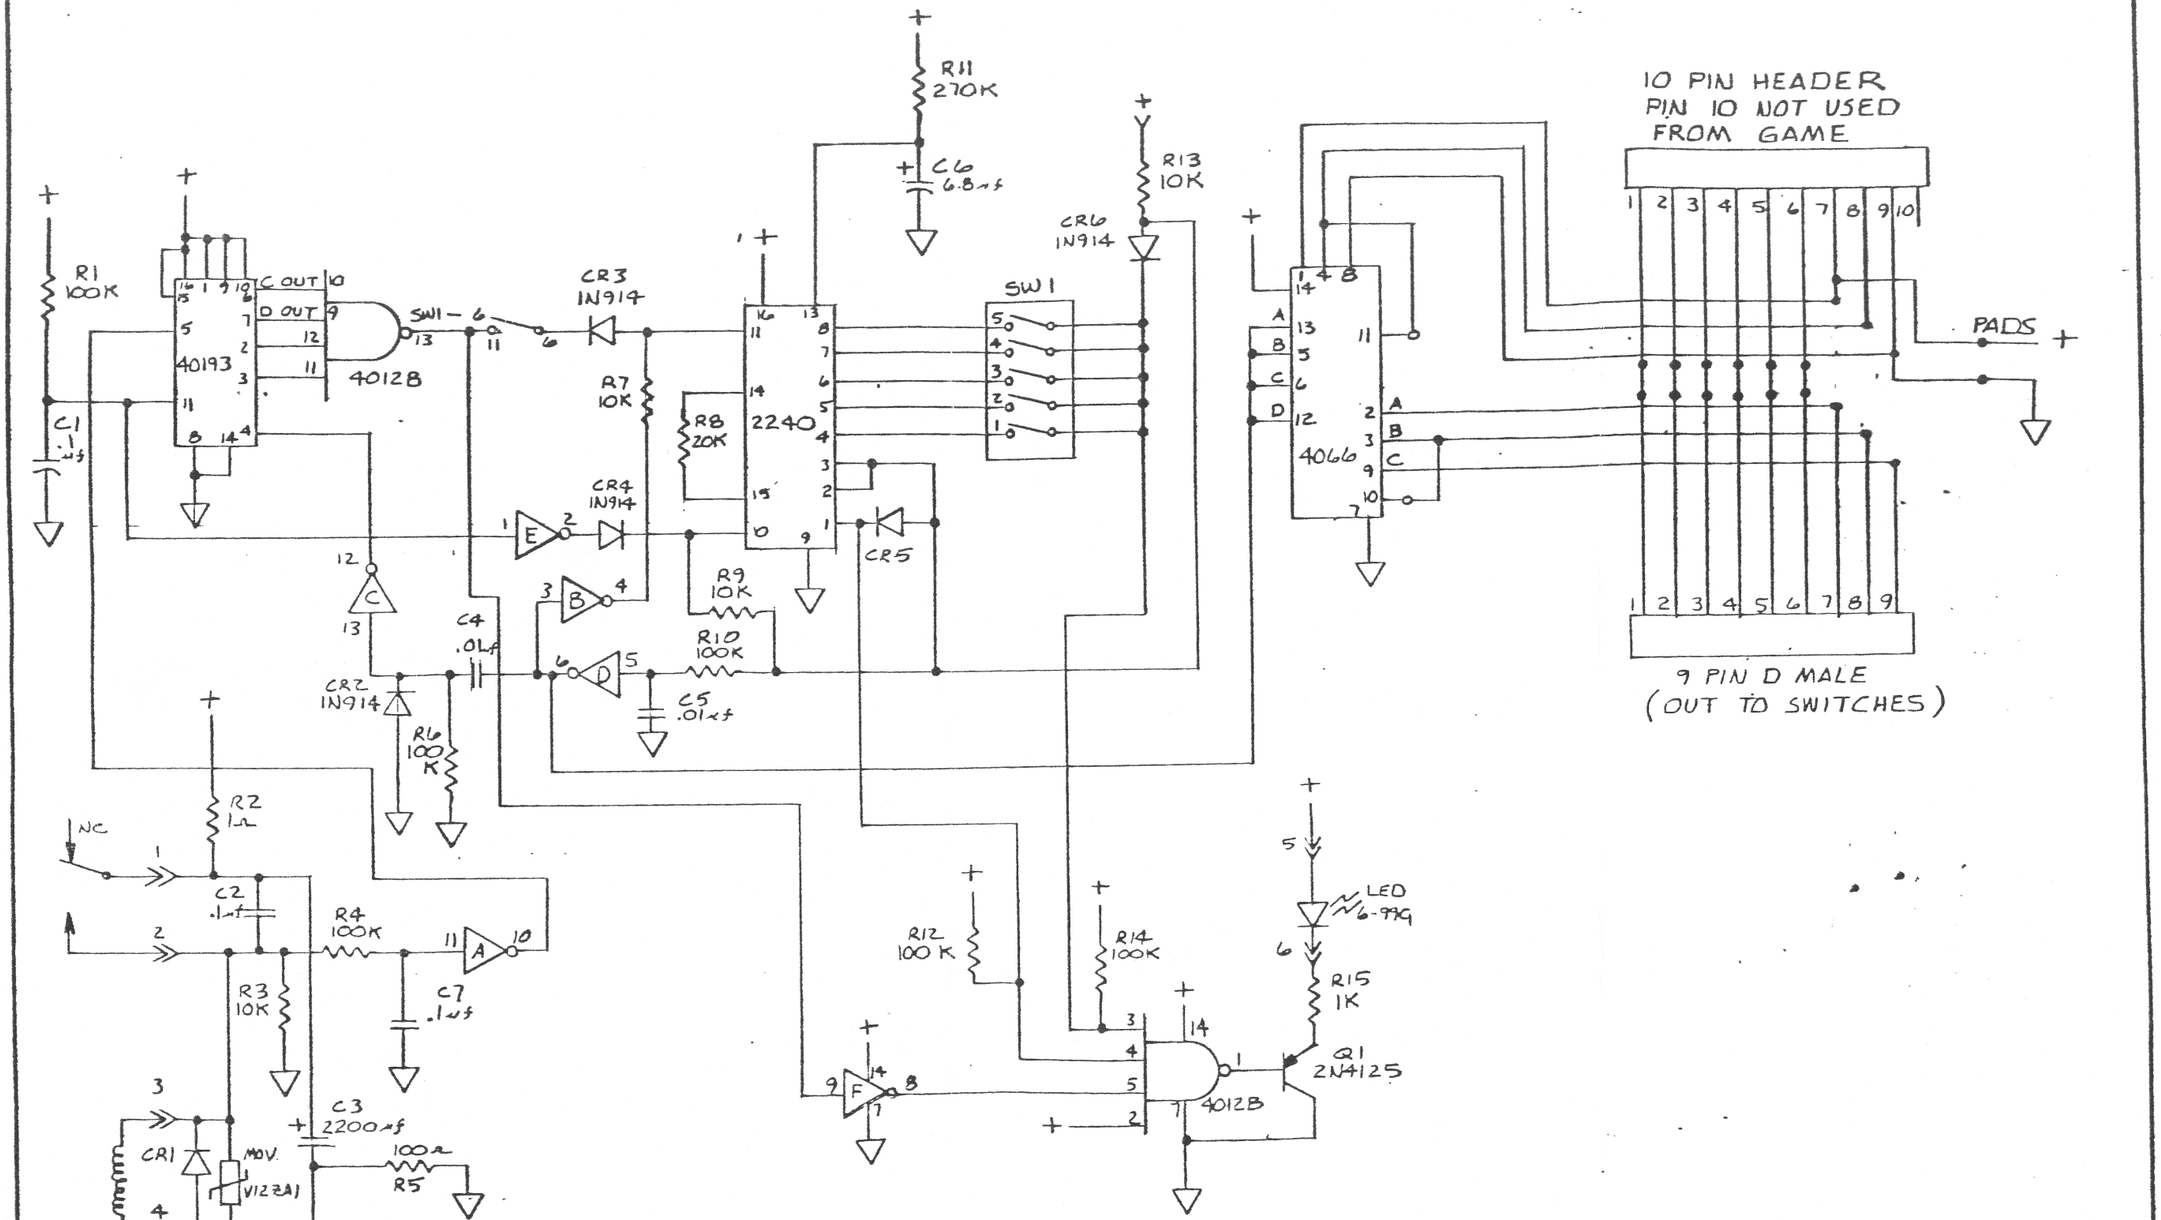

C REV 1/20/83 D.A.
B REV 1/17/83 A.K.O
"A" REV 12/21/82 D.A.

E.S.I.

SCALE: ——	APPROVED BY:	DRAWN BY:
DATE: 12/10/82		REVISED

SCHEMATIC - TIMER BOARD

DRAWING NUMBER
93-1990